

## SPECIFICATIONS

### Environmental

Ambient operating range -	30°C to 50°C (-21 to 122°F)
Storage temperature range	-40°C to 60°C (-40 to 140°F)
Humidity	0 to 70% R.H.

### ELECTRICAL

Measurement Ranges	-200°C to 1372°C
Accuracy@23°C	±0.1% of reading ±0.2°C
Characterising error	less than 0.05°C
Temperature coefficient	0.01% of reading/°C
Cold junction compensation	0.0075°C/°C
Resolution	0.1° autoranging to 1° 1000°

### Note

Strong RF fields may adversely affect measurement accuracy.

### General

Weight	155gms (5.47oz)
Dimensions	130 x 70 x 33 mm
Battery	PP3
Battery Life	200 Hours

Technology in Temperature



TM Electronics (UK) Limited

Mulberry House  
Mulberry Lane  
Goring-by-Sea  
Worthing  
West Sussex  
BN12 4RD

TELEPHONE: +44 (0) 1903 700651

FAX: +44 (0) 1903 244307

EMAIL: [sales@tmthermometers.com](mailto:sales@tmthermometers.com)

[www.tmthermometers.com](http://www.tmthermometers.com)



MM2008 Legionella Thermometer



GB

English


## INTRODUCTION

Your high accuracy microprocessor driven thermometer is suitable for use with T & K type thermocouple sensors

The thermocouple calibrations are in accordance with national and international standards (NBS and IEC) tables.

### Features

- PRESET TO °C
- OVERRANGE/OPENCIRCUIT PROBE INDICATION
- T & K THERMOCOUPLE TYPE
- LOW BATTERY INDICATION
- RETENTION OF THERMOCOUPLE TYPE AND SCALE

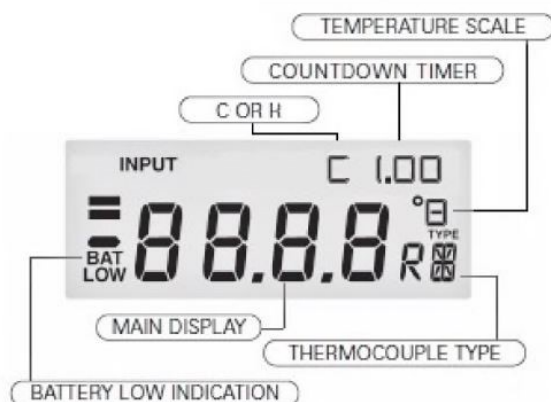


## OPERATING INSTRUCTIONS

### To Measure Temperature

1. Fit the battery to the instrument (refer to battery replacement details)
2. Switch thermometer ON.
3. Plug thermocouple into input socket.
4. Take measurement by contacting object with probe and reading from the display.

## USING THE TIMER FUNCTIONS

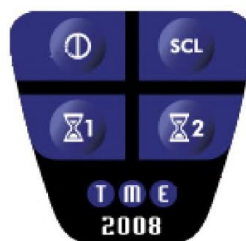

Press for 1 minute countdown for Hot water temperatures



Press for 2 minute countdown for Cold water temperatures

Press the same button again to switch off

T M E

## Replacing The Battery

The instrument will indicate 'BAT LOW' when the battery needs changing.

The battery compartment is on the rear of the instrument. Using a small screwdriver ease back the tab of the battery compartment. The compartment will then lift away.

## Open Circuit Thermocouple Detection

An error in the probe is shown on the display by a series of bars '-----' coupled with the word 'INPUT' at the top of the display. This indicates either that the probe has an error or the temperature is out of range.